


Part # LS-CANNESFL XX

19-0111

**CAUTION**

For indoor use only. Keep out of reach of children and animals. Place on flat surface and away from flammable materials. Never operate this appliance if it has a damaged cord, plug or cable. Keep cord away from heated and/or damp areas. Use 40 WATT max., Type A E26 Bulb only.

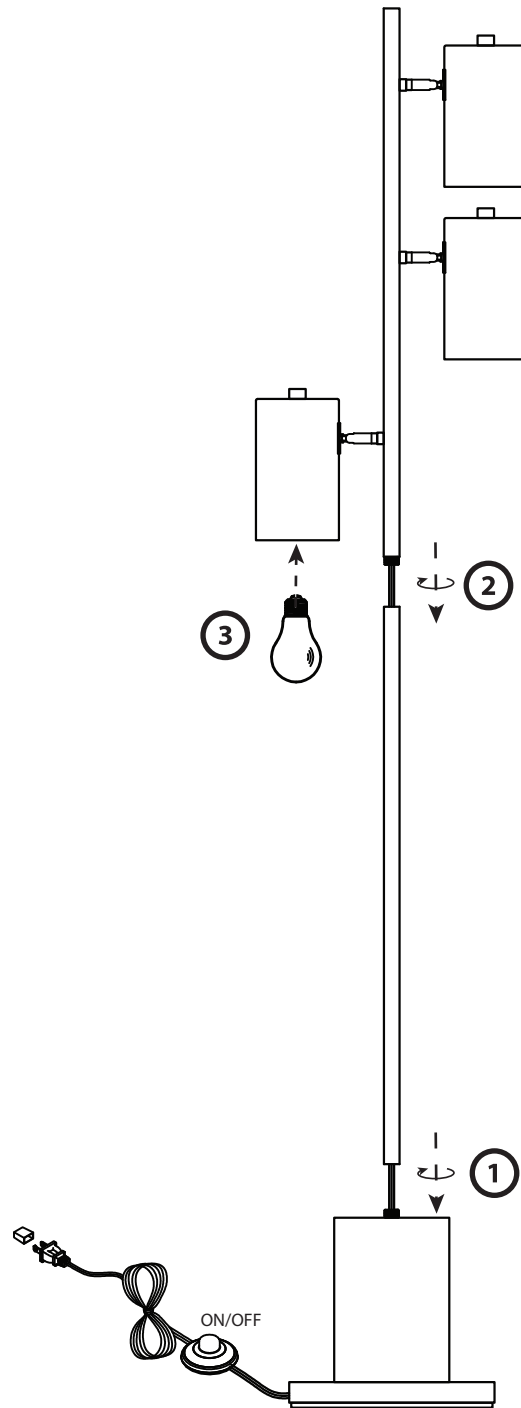

Do not over tighten.
Do not use power tools to assemble.