

Harper TV Stand

Assembly Instructions
Instrucciones De Asamblea
Instructions d'Assemblée

Part # TV-HARPER XX+XX

20-0310

PARTS



(7 x 39mm)

A x 24



B x 24



(8 x 30mm)

C x 26



D x 4



(8 x 30mm)

E x 24



F x 4



(3 x 16mm)

G x 20



(5 x 40mm)

H x 8



I x 2



(3.5 x 14mm)

J x 4



K x 2



L x 2



M x 2



(4 x 14mm)

N x 8




O x 2




TOOLS



PARTS

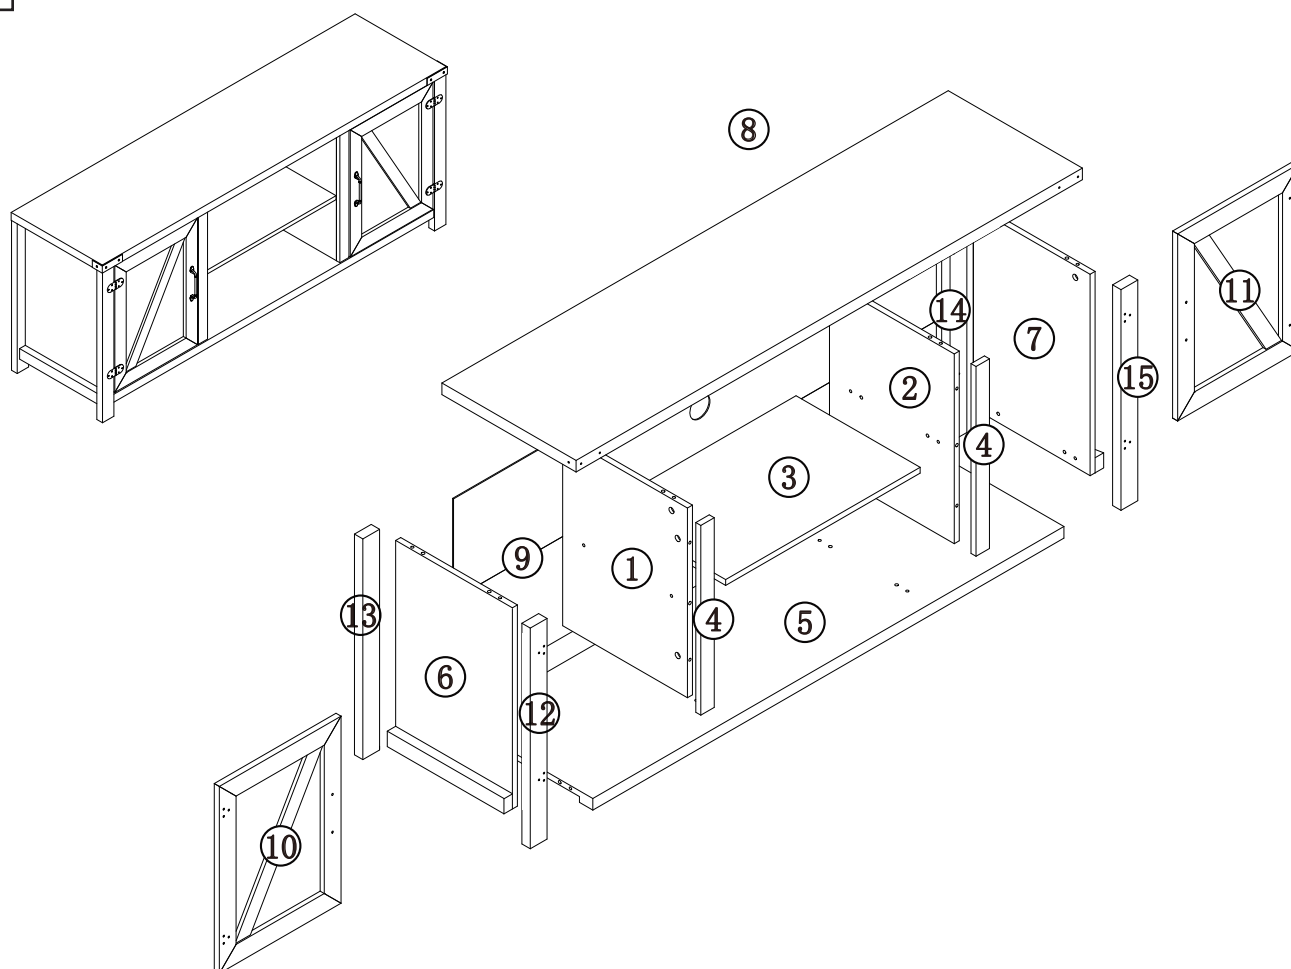


Do not over tighten.
Do not use power tools to assemble.

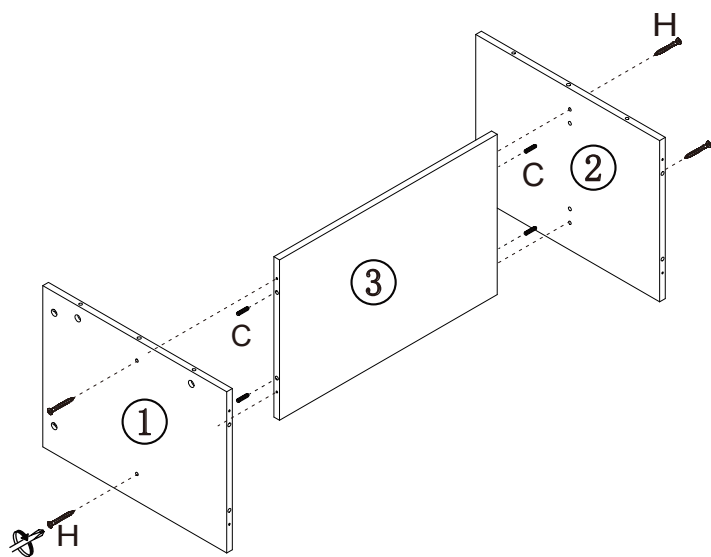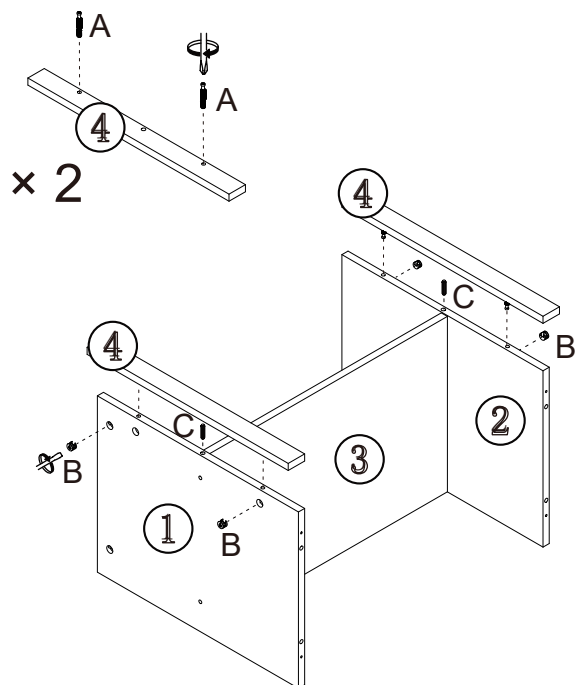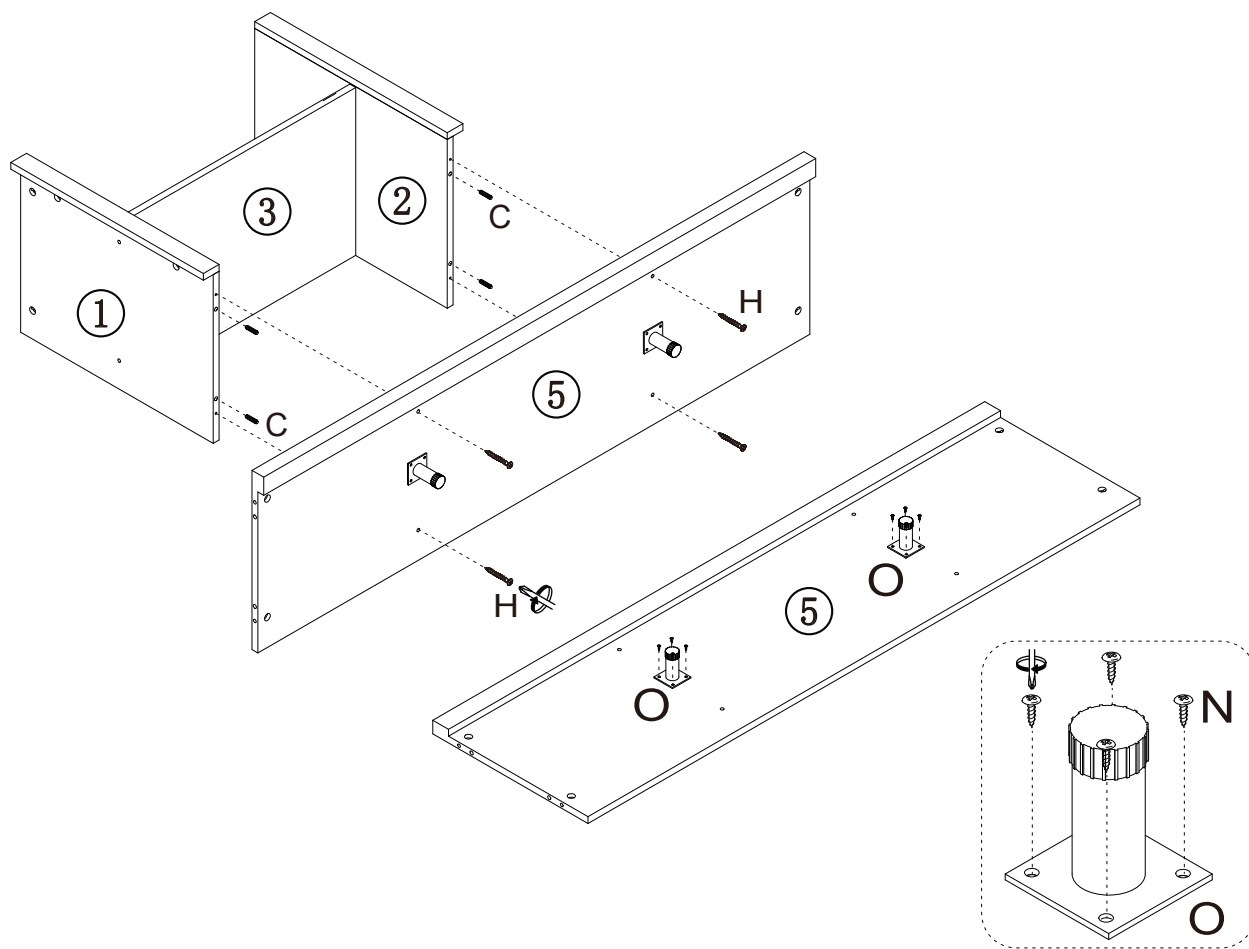
1**2****3**

Do not over tighten.
Do not use power tools to assemble.


4

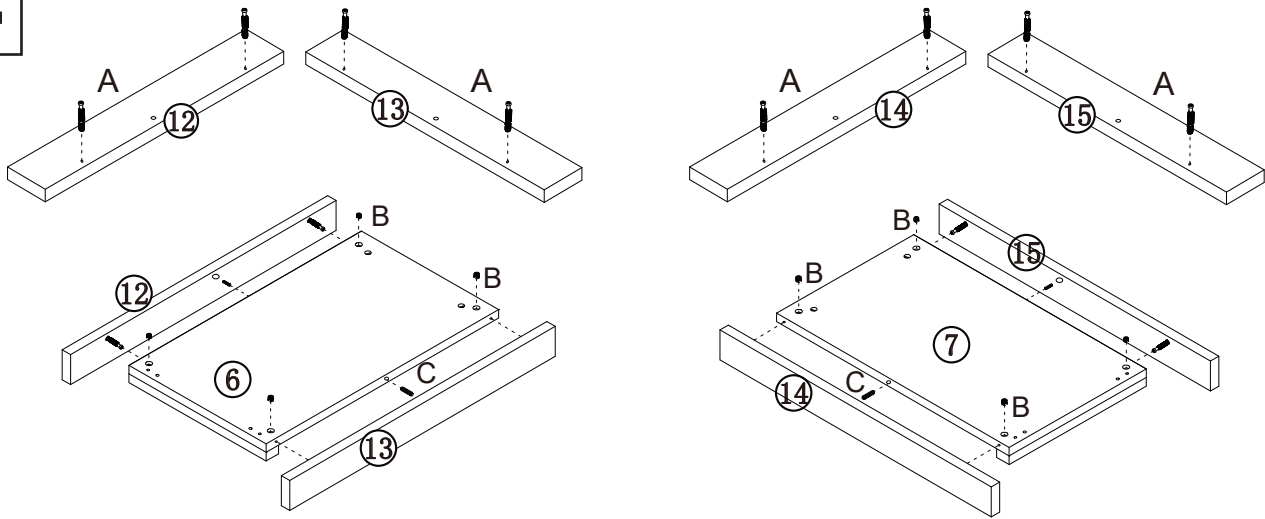

5

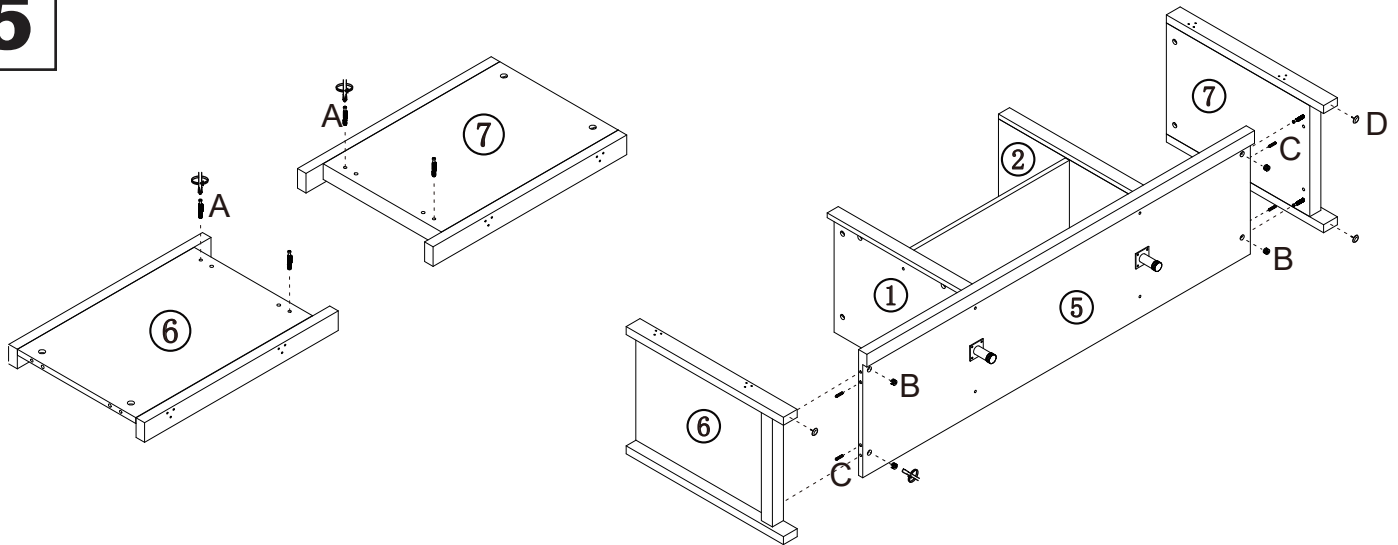


6

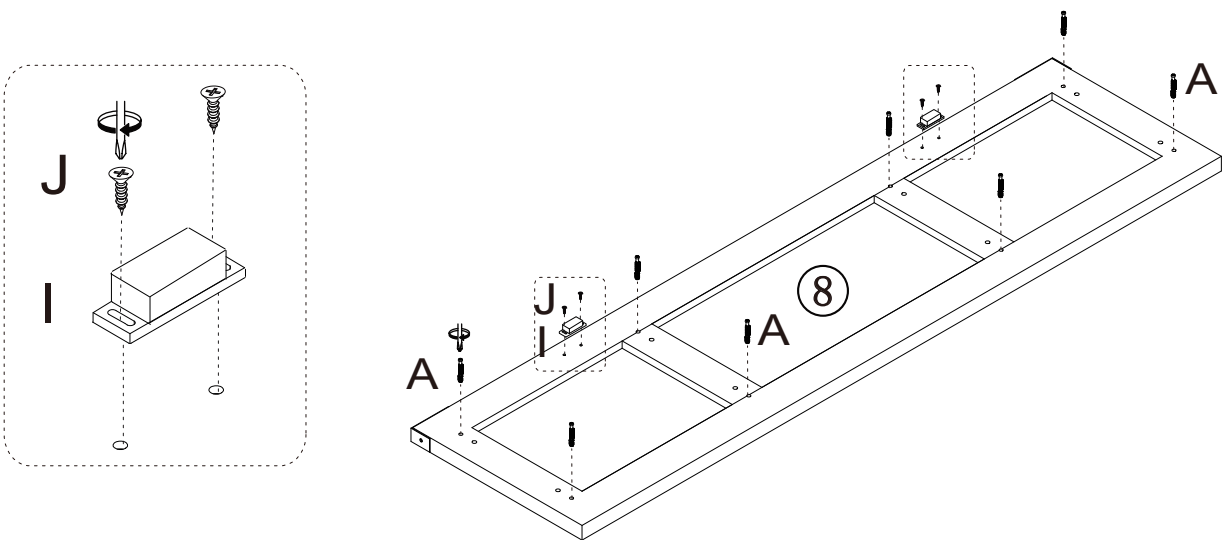


Do not over tighten.
Do not use power tools to assemble.








7

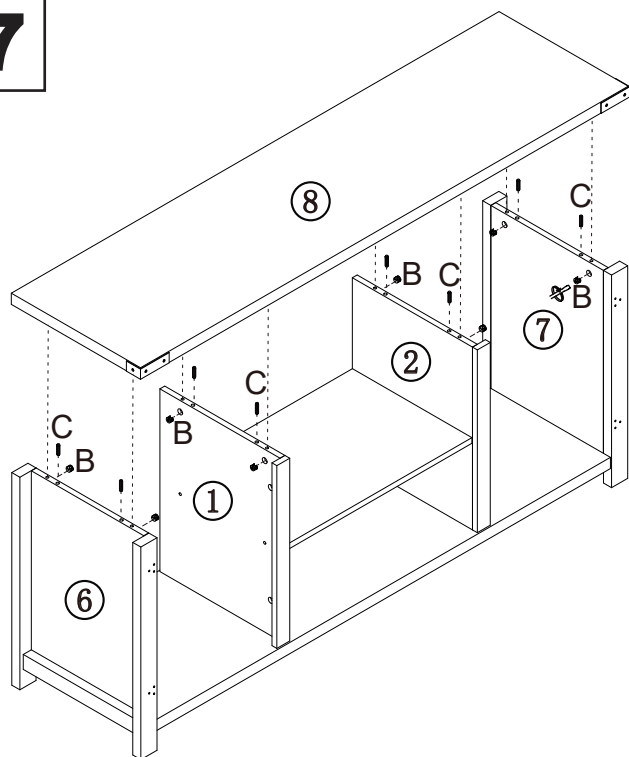

8

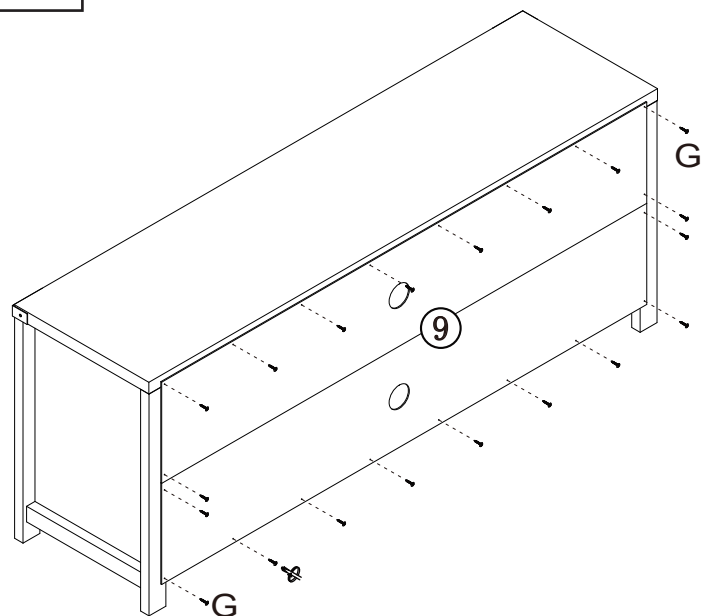

9

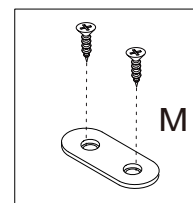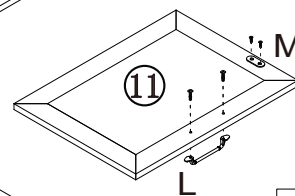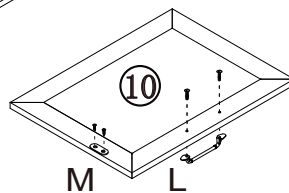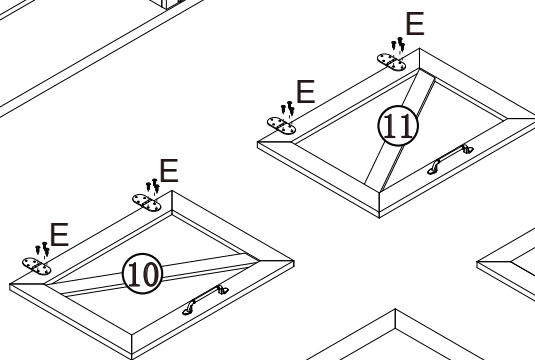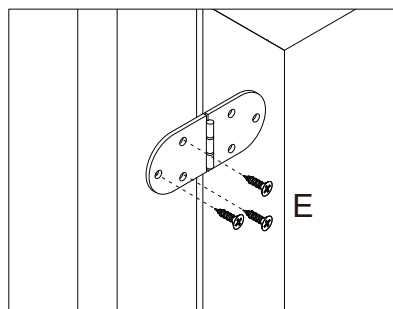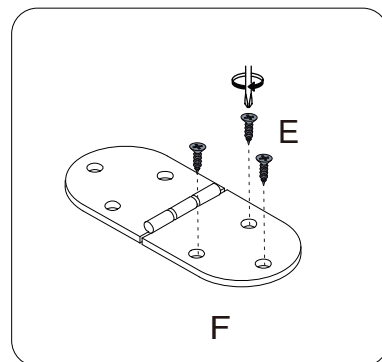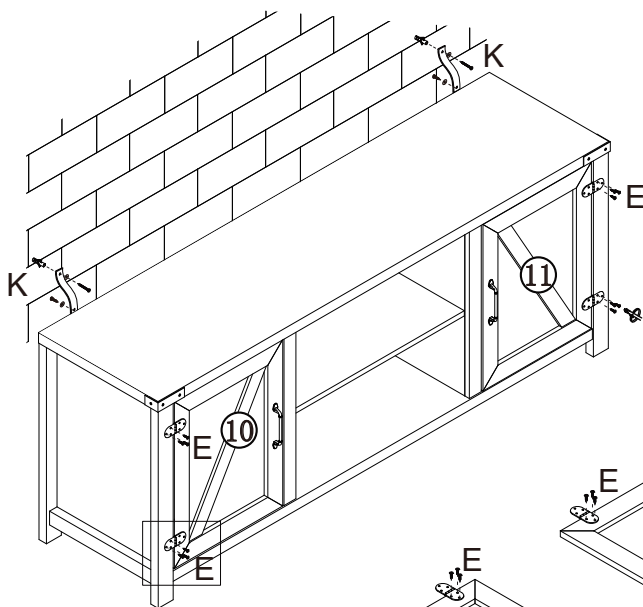


Do not over tighten.
Do not use power tools to assemble.

10



SAFETY WARNING:

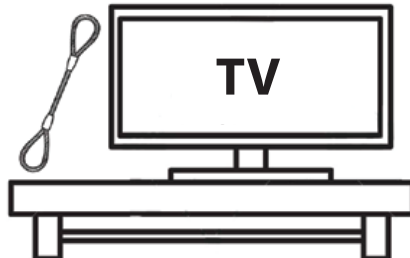

- TV's CAN CAUSE SERIOUS INJURY OR DEATH DUE TO TIPPING OVER
- SECURE TV TO THE WALL OR FURNITURE TO AVOID POTENTIAL TIPPING INJURY
- FOR MORE INFORMATION VISIT: WWW.ANCHORIT.GOV
- TV's PUEDEN CAUSAR LESIONES GRAVES O LA MUERTE POR CAERSE
- ASEGURE LA TV A LA PARED O AL MUEBLE PARA EVITAR LESIONES POTENCIALES POR VUELCO
- PARA MÁS INFORMACIÓN VISITE: WWW.ANCHORIT.GOV
- LES TV PEUVENT CAUSER DES BLESSURES GRAVES OU LA MORT EN RAISON DE RENVERSEMENT
- SÉCURISER LE TV AU MUR OU AU MOBILIER POUR ÉVITER LES BLESSURES POTENTIELLES DE BASCULEMENT
- POUR PLUS D'INFORMATIONS, VISITEZ: ANCHORIT.GOV



Do not over tighten.
Do not use power tools to assemble.