
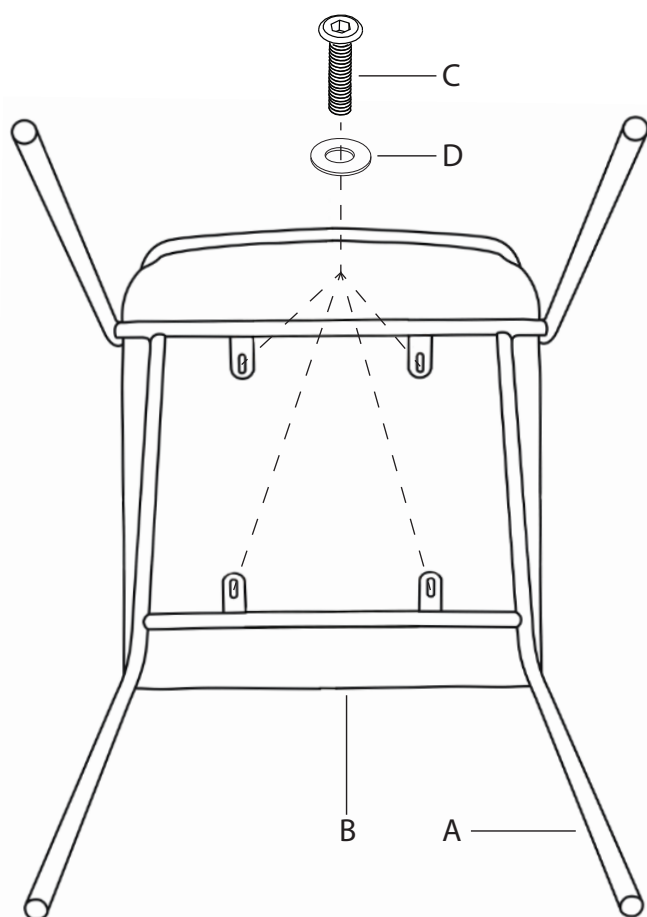
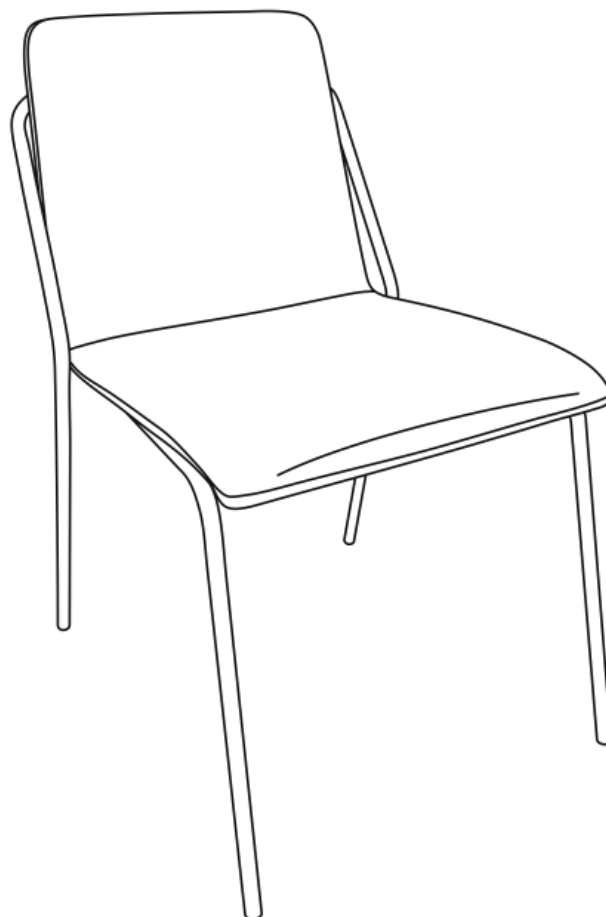


Part # CH-STEFANI XX+XX

19-0121

PARTS**1****2**

Do not over tighten.
Do not use power tools to assemble.